

EURTON ELECTRIC CO., INC.

Manufacture to Eurton Cross Over Numbers

info@eurtonelectric.com

1-562-946-4477

HITACHI

fax 1-562-946-0014

| MODEL | EURTON # | |
|---------|----------|---------------------|
| C10FA | 99-044 | 99-044A "auto-stop" |
| C10FCB | 99-044 | 99-044A "auto-stop" |
| C10FSB | 99-043 | 99-043A "auto-stop" |
| C10FSH | 99-043 | 99-043A "auto-stop" |
| C10RA | 99-044 | 99-044A "auto-stop" |
| C13U | 99-044 | 99-044A "auto-stop" |
| C6BU | 990-56 | |
| C6DD | 99-058 | |
| C6U | 99-043 | 99-043A "auto-stop" |
| C7BU | 990-56 | |
| C7U | 99-043 | 99-043A "auto-stop" |
| C8FA | 99-043 | 99-043A "auto-stop" |
| C8FC | 99-043 | 99-043A "auto-stop" |
| C8FS | 99-043 | 99-043A "auto-stop" |
| C9U | 99-038 | 99-038A "auto-stop" |
| CC12Y | 99-044 | 99-044A "auto-stop" |
| CC14SE | 99-044 | 99-044A "auto-stop" |
| CD12F | 99-044 | 99-044A "auto-stop" |
| CE16 | 99-021 | 99-021A "auto-stop" |
| CE16SA | 99-021 | 99-021A "auto-stop" |
| CJ110V | 99-075 | |
| CJ120V | 99-041 | 99-041A "auto-stop" |
| CJ60V | 99-021 | 99-021A "auto-stop" |
| CJ65V | 99-021 | 99-021A "auto-stop" |
| CJ65V2 | 99-075 | |
| CJ65VA | 99-021 | 99-021A "auto-stop" |
| CJ65VA2 | 99-075 | |
| CM12Y | 99-044 | 99-044A "auto-stop" |
| CM6 | 99-043 | 99-043A "auto-stop" |
| CN16 | 99-021 | 99-021A "auto-stop" |
| CN16SA | 99-021 | 99-021A "auto-stop" |
| CR10V | 99-073 | |
| CR12V | 99-043 | 99-043A "auto-stop" |
| CR13V | 99-043 | 99-043A "auto-stop" |
| CR13VA | 99-043 | 99-043A "auto-stop" |
| CR13VC | 99-043 | 99-043A "auto-stop" |
| CR17Y | 99-043 | 99-043A "auto-stop" |
| CR18DV | 99-058 | |
| CR24DV | 99-058 | |
| CS28B | 99-038 | 99-038A "auto-stop" |
| CS35B | 99-038 | 99-038A "auto-stop" |

| MODEL | EURTON # | |
|---------|----------|---------------------|
| D10VC | 99-041 | 99-041A "auto-stop" |
| D10VC2 | 99-041 | 99-041A "auto-stop" |
| D10VD | 99-041 | 99-041A "auto-stop" |
| D10VF | 99-041 | 99-041A "auto-stop" |
| D10YA | 99-021 | 99-021A "auto-stop" |
| D10YB | 99-021 | 99-021A "auto-stop" |
| D13 | 99-073 | |
| D13T | 99-041 | 99-041A "auto-stop" |
| D13T2 | 99-041 | 99-041A "auto-stop" |
| D13VB | 99-041 | 99-041A "auto-stop" |
| D13VB2 | 99-041 | 99-041A "auto-stop" |
| D13VF | 99-041 | 99-041A "auto-stop" |
| D6SH | 99-041 | 99-041A "auto-stop" |
| DC120V | 99-043 | 99-043A "auto-stop" |
| DC120VA | 99-043 | 99-043A "auto-stop" |
| DG6 | 99-041 | 99-041A "auto-stop" |
| DH16V | 99-041 | 99-041A "auto-stop" |
| DH18VB | 99-041 | 99-041A "auto-stop" |
| DH20PB | 99-041 | 99-041A "auto-stop" |
| DH20V | 99-070 | |
| DH22VB | 99-041 | 99-041A "auto-stop" |
| DH22VD | 99-041 | 99-041A "auto-stop" |
| DH24DV | 99-090 | |
| DH24PA | 99-041 | 99-041A "auto-stop" |
| DH24PB | 99-041 | 99-041A "auto-stop" |
| DH24PB2 | 99-088 | |
| DH24PC | 99-041 | 99-041A "auto-stop" |
| DH24PC2 | 99-088 | |
| DH24PD | 99-041 | 99-041A "auto-stop" |
| DH24VB | 99-041 | 99-041A "auto-stop" |
| DH24VD | 99-041 | 99-041A "auto-stop" |
| DH25PB | 99-070 | |
| DH25V | 99-070 | |
| DH25Y | 99-070 | |
| DH28Y | 99-073 | |
| DH30PC | 99-073 | |
| DH38YB | 99-073 | |
| DH38YD | 99-073 | |
| DH40MA | 99-073 | |
| DH40MB | 99-073 | |
| DH40MR | 99-073 | |

EURTON ELECTRIC CO., INC.

Manufacture to Eurton Cross Over Numbers

info@eurtonelectric.com

1-562-946-4477

HITACHI

fax 1-562-946-0014

| MODEL | EURTON # | |
|----------|----------|---------------------|
| DH50MB | 99-077 | |
| DH50SA | 99-038 | 99-038A "auto-stop" |
| DH50SA1 | 99-038 | 99-038A "auto-stop" |
| DMT13A | 99-041 | 99-041A "auto-stop" |
| DS12DM | 99-054 | |
| DS14DMR | 99-054 | |
| DS18DMR | 99-054 | |
| DU10 | 99-041 | 99-041A "auto-stop" |
| DUT10 | 99-041 | 99-041A "auto-stop" |
| DUT13 | 99-041 | 99-041A "auto-stop" |
| DV16V | 99-041 | 99-041A "auto-stop" |
| DV20T | 99-041 | 99-041A "auto-stop" |
| DV20T2 | 99-041 | 99-041A "auto-stop" |
| DV20V2 | 99-041 | 99-041A "auto-stop" |
| DV20VB | 99-041 | 99-041A "auto-stop" |
| DV20VB2 | 99-041 | 99-041A "auto-stop" |
| DV20VB2K | 99-041 | 99-041A "auto-stop" |
| DV20VBK | 99-041 | 99-041A "auto-stop" |
| DV24DV | 99-058 | |
| DW15Y | 99-041 | 99-041A "auto-stop" |
| F20A | 99-021 | 99-021A "auto-stop" |
| F30A | 99-043 | 99-043A "auto-stop" |
| FC5SA1 | 99-041 | 99-041A "auto-stop" |
| FC6SA | 99-043 | 99-043A "auto-stop" |
| FC6SB | 99-043 | 99-043A "auto-stop" |
| FC7SA | 99-043 | 99-043A "auto-stop" |
| FCJ55 | 99-041 | 99-041A "auto-stop" |
| FCJ55V | 99-041 | 99-041A "auto-stop" |
| FCJ55VA | 99-041 | 99-041A "auto-stop" |
| FCJ65V | 99-041 | 99-041A "auto-stop" |
| FDV12T | 99-041 | 99-041A "auto-stop" |
| FDV12V | 99-041 | 99-041A "auto-stop" |
| FDV12Y | 99-041 | 99-041A "auto-stop" |
| FDV15T | 99-041 | 99-041A "auto-stop" |
| FDV15V | 99-041 | 99-041A "auto-stop" |
| FDV16VA | 99-041 | 99-041A "auto-stop" |
| FDV16VB | 99-041 | 99-041A "auto-stop" |
| FDV16VB2 | 99-041 | 99-041A "auto-stop" |
| FDV20VA | 99-041 | 99-041A "auto-stop" |
| FG10SA | 99-021 | 99-021A "auto-stop" |
| FG12SA2 | 99-021 | 99-021A "auto-stop" |

| MODEL | EURTON # | |
|--------|----------|---------------------|
| FH35SA | 99-041 | 99-041A "auto-stop" |
| FH45 | 99-041 | 99-041A "auto-stop" |
| FJ50SB | 99-041 | 99-041A "auto-stop" |
| FJ50VA | 99-041 | 99-041A "auto-stop" |
| FM8 | 99-041 | 99-041A "auto-stop" |
| FP20SA | 99-041 | 99-041A "auto-stop" |
| FS10SB | 99-041 | 99-041A "auto-stop" |
| FSV12 | 99-041 | 99-041A "auto-stop" |
| FSV12V | 99-041 | 99-041A "auto-stop" |
| FSV13Y | 99-041 | 99-041A "auto-stop" |
| FU20 | 99-041 | 99-041A "auto-stop" |
| FV12T | 99-041 | 99-041A "auto-stop" |
| FV12VA | 99-041 | 99-041A "auto-stop" |
| FV12VB | 99-041 | 99-041A "auto-stop" |
| G10SD | 99-021 | 99-021A "auto-stop" |
| G10SD1 | 99-021 | 99-021A "auto-stop" |
| G10SG | 99-021 | 99-021A "auto-stop" |
| G10SR | 99-021 | 99-021A "auto-stop" |
| G10SR2 | 99-021 | 99-021A "auto-stop" |
| G12S1 | 99-021 | 99-021A "auto-stop" |
| G12S2 | 99-088 | |
| G12SE | 99-088 | |
| G12SE2 | 99-088 | |
| G12SG | 99-021 | 99-021A "auto-stop" |
| G12SR | 99-021 | 99-021A "auto-stop" |
| G12SR2 | 99-021 | 99-021A "auto-stop" |
| G13SB | 99-021 | 99-021A "auto-stop" |
| G13SB2 | 99-088 | |
| G13SC | 99-043 | 99-043A "auto-stop" |
| G13SC2 | 99-043 | 99-043A "auto-stop" |
| G13SE | 99-088 | |
| G13SE2 | 99-088 | |
| G13YB | 99-021 | 99-021A "auto-stop" |
| G13YB1 | 99-021 | 99-021A "auto-stop" |
| G13YC | 99-088 | |
| G18SC | 99-038 | 99-038A "auto-stop" |
| G18SE | 99-044 | 99-044A "auto-stop" |
| G18SE2 | 99-044 | 99-044A "auto-stop" |
| G18SE3 | 99-061 | |
| G18UB | 99-044 | 99-044A "auto-stop" |
| G23MR | 99-061 | |

EURTON ELECTRIC CO., INC.

Manufacture to Eurton Cross Over Numbers

info@eurtonelectric.com

1-562-946-4477

HITACHI

fax 1-562-946-0014

| MODEL | EURTON # | |
|---------|----------|---------------------|
| G23SC | 99-044 | 99-044A "auto-stop" |
| G23SC2 | 99-044 | 99-044A "auto-stop" |
| G23SC3 | 99-061 | |
| G23SE | 99-044 | 99-044A "auto-stop" |
| G23SF | 99-044 | 99-044A "auto-stop" |
| G23SF2 | 99-061 | |
| G23UB | 99-044 | 99-044A "auto-stop" |
| G23UB2 | 99-061 | |
| GP2 | 99-021 | 99-021A "auto-stop" |
| H25PV | 99-056 | |
| H41SA | 99-073 | |
| H45MA | 99-073 | |
| H45MR | 99-073 | |
| H45SA | 99-073 | |
| H55SA | 99-038 | 99-038A "auto-stop" |
| H60KA | 99-044 | 99-044A "auto-stop" |
| H60MA | 99-044 | 99-044A "auto-stop" |
| H60MB | 99-044 | 99-044A "auto-stop" |
| H65SB | 99-044 | 99-044A "auto-stop" |
| H65SD | 99-044 | 99-044A "auto-stop" |
| H70SD | 99-044 | 99-044A "auto-stop" |
| H90SA | 99-044 | 99-044A "auto-stop" |
| H90SC | 99-044 | 99-044A "auto-stop" |
| H90SE | 99-044 | 99-044A "auto-stop" |
| HU12 | 99-038 | 99-038A "auto-stop" |
| HU14 | 99-038 | 99-038A "auto-stop" |
| M12SA | 99-044 | 99-044A "auto-stop" |
| M12V | 99-044 | 99-044A "auto-stop" |
| M65SB | 99-021 | 99-021A "auto-stop" |
| M8 | 99-043 | 99-043A "auto-stop" |
| M8V | 99-043 | 99-043A "auto-stop" |
| MDS35 | 99-073 | |
| MDS35/2 | 99-073 | |
| P20SA | 99-041 | 99-041A "auto-stop" |
| P20SA2 | 99-041 | 99-041A "auto-stop" |
| P20SD | 99-038 | 99-038A "auto-stop" |
| P20SE | 99-021 | 99-021A "auto-stop" |
| P20V | 99-041 | 99-041A "auto-stop" |
| PB20 | 99-021 | 99-021A "auto-stop" |
| PDP100C | 99-021 | 99-021A "auto-stop" |
| PSM7 | 99-038 | 99-038A "auto-stop" |
| PSM9 | 99-044 | 99-044A "auto-stop" |

| MODEL | EURTON # | |
|---------|----------|---------------------|
| PSU13 | 99-044 | 99-044A "auto-stop" |
| PSU6 | 99-043 | 99-043A "auto-stop" |
| PSU7 | 99-044 | 99-044A "auto-stop" |
| PSU9 | 99-044 | 99-044A "auto-stop" |
| SAH180 | 99-038 | 99-038A "auto-stop" |
| SAT180 | 99-043 | 99-043A "auto-stop" |
| SAY150A | 99-021 | 99-021A "auto-stop" |
| SB10T | 99-043 | 99-043A "auto-stop" |
| SB10V | 99-043 | 99-043A "auto-stop" |
| SB110 | 99-038 | 99-038A "auto-stop" |
| SB75 | 99-043 | 99-043A "auto-stop" |
| SO110 | 99-021 | 99-021A "auto-stop" |
| SOD110 | 99-021 | 99-021A "auto-stop" |
| SP18V | 99-043 | 99-043A "auto-stop" |
| SP18VA | 99-043 | 99-043A "auto-stop" |
| SV12 | 99-021 | 99-021A "auto-stop" |
| SV12SA | 99-041 | 99-041A "auto-stop" |
| SV12SD | 99-041 | 99-041A "auto-stop" |
| SV12SE | 99-041 | 99-041A "auto-stop" |
| SV12SF | 99-041 | 99-041A "auto-stop" |
| SV12SG | 99-041 | 99-041A "auto-stop" |
| SV12V | 99-041 | 99-041A "auto-stop" |
| SV8SA | 99-041 | 99-041A "auto-stop" |
| TR12 | 99-038 | 99-038A "auto-stop" |
| TR6 | 99-021 | 99-021A "auto-stop" |
| TR8 | 99-043 | 99-043A "auto-stop" |
| VB16Y | 99-043 | 99-043A "auto-stop" |
| VR16 | 99-021 | 99-021A "auto-stop" |
| VRV16 | 99-084 | |
| VTP13AK | 99-041 | 99-041A "auto-stop" |
| VTP13K | 99-041 | 99-041A "auto-stop" |
| VTP16A | 99-073 | |
| VTV13 | 99-041 | 99-041A "auto-stop" |
| VTV16 | 99-073 | |
| VTV18 | 99-041 | 99-041A "auto-stop" |
| W4YF | 99-021 | 99-021A "auto-stop" |
| W6V1 | 99-041 | 99-041A "auto-stop" |
| W6V3 | 99-041 | 99-041A "auto-stop" |
| W6VA2 | 99-041 | 99-041A "auto-stop" |
| W6VB | 99-041 | 99-041A "auto-stop" |
| W6VB2 | 99-041 | 99-041A "auto-stop" |
| W6VE | 99-041 | 99-041A "auto-stop" |

EURTON ELECTRIC CO., INC.

Manufacture to Eurton Cross Over Numbers

info@eurtonelectric.com


1-562-946-4477

HITACHI

fax 1-562-946-0014

| MODEL | EURTON # | |
|---------|----------|---------------------|
| W6VF | 99-041 | 99-041A "auto-stop" |
| W8VB | 99-041 | 99-041A "auto-stop" |
| WC35 | 99-088 | |
| WC65 | 99-044 | 99-044A "auto-stop" |
| WH12DM | 99-054 | |
| WH12DM2 | 99-054 | |
| WH14DM | 99-054 | |
| WH16 | 99-021 | 99-021A "auto-stop" |
| WH22 | 99-043 | 99-043A "auto-stop" |
| WH9DM | 99-054 | |
| WR12DM | 99-054 | |
| WR12DM2 | 99-054 | |
| WR14DM | 99-054 | |
| X100 | 99-021 | 99-021A "auto-stop" |

| MODEL | EURTON # |
|-------|----------|
|-------|----------|

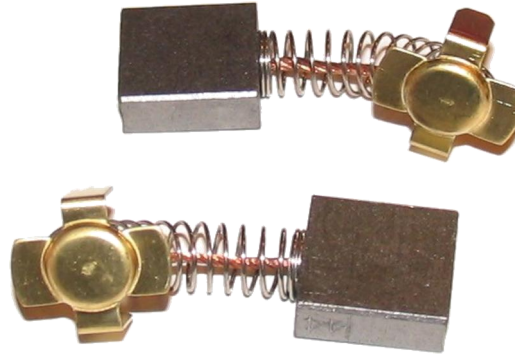

HITACHI BRUSH KIT

Part # HI-kit

available on-line

www.store.eurtonelectric.com

EURTON ELECTRIC

9920 Painter Ave.

Santa Fe Springs CA 90670

EURTON ELECTRIC CO., INC.

Manufacture to Eurton Cross Over Numbers

Quick Interchange from OEM Part # to Eurton Part #

HITACHI

| OEM # | EURTON # | OEM # | EURTON # |
|----------|----------|----------|----------|
| 999-003 | 99-003 | 999-043 | 99-043 |
| 999-006 | 99-006 | 999-043A | 99-043A |
| 999-008 | 99-008 | 999-044 | 99-044 |
| 999-010 | 99-010 | 999-044A | 99-044A |
| 999-011 | 99-011 | 999-054 | 99-054 |
| 999-012 | 99-012 | 999-058 | 99-058 |
| 999-018 | 99-018 | 999-061 | 99-061 |
| 999-019 | 99-044A | 999-061 | 99-061 |
| 999-020 | 99-025 | 999-070 | 99-070 |
| 999-020A | 99-202A | 999-071 | 99-038 |
| 999-021 | 99-021 | 999-072 | 99-041 |
| 999-021A | 99-021A | 999-074 | 99-044A |
| 999-022 | 99-022 | 999-080Z | 99-021 |
| 999-023 | 99-023 | 999-081Z | 99-044A |
| 999-024 | 99-024 | 999-084 | 99-041 |
| 999-025 | 99-025 | 999-085 | 99-021 |
| 999-029 | 99-035 | 999-089 | 99-061 |
| 999-030 | 99-030 | 999-100 | 99-100 |
| 999-032 | 99-044A | 937973Z | 99-044A |
| 999-034 | 99-044A | 961946Z | 99-038A |
| 999-035 | 99-035 | 964976Z | 99-036 |
| 999-036 | 99-036 | 974611Z | 99-044A |
| 999-038 | 99-038 | 980612Z | 99-043A |
| 999-038A | 99-038A | 981612Z | 99-043A |
| 999-041 | 99-041 | 990081Z | 99-044 |
| 999-041A | 99-041A | | |



HITACHI BRUSH KIT

Part # HI-kit

available on-line

www.store.eurtonelectric.com

EURTON ELECTRIC

9920 Painter Ave.

Santa Fe Springs CA 90670

